





Fixing Nuts and Bolts

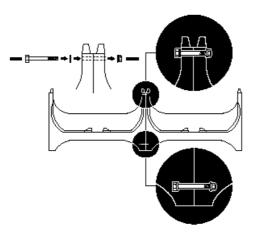

 Fully tighten nuts and bolts
 Check the tightness of the nuts and bolts at regular intervals

**Driving style** 

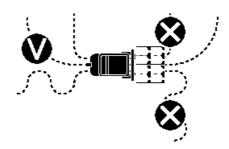


 Drive slowly
 Keep the OP® crates around 10 cm above the floor while driving
 Do not brake suddenly or sharply
 Turn corners gently
 Do not make any abrupt movements
 Do not lift or put down the OP® crates while driving

OP Sarl – 48, Boulevard Recteur Jean Sarrailh – 64000 PAU - FRANCE Tel. +33-5.59.92.43.43 - Fax. +33-5.59.40.18.55 - www.op-crate.com



## **Stacking OP® crates**

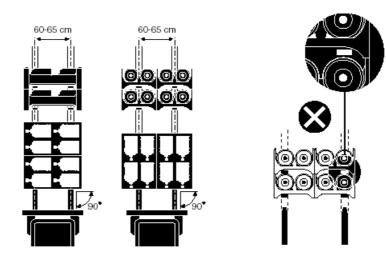

 Place the OP® crates straight on the forks
 Drive straight up to the stack of OP® crates
 Lift OP® crates gently
 Tilt the forks backwards
 Drive up to the stack
 Interlock the front legs
 Engage the back legs by levelling the forks
 Align the forks horizontally
 Drive out


## Lifting OP® crates

 Drive straight up to the stack of OP® crates
 Tilt the forks slightly forward
 Put the forks in between bottles

 Tilt the forks backwards
 Lift the OP® crates
 Drive out



## **Stacking Heights**

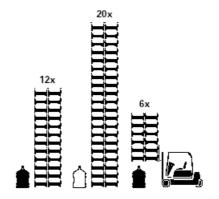

1. Stack up to 12 high (96 bottles) with full bottles 2. Stack up to 20 high (160 bottles) with empty bottles 3. Stack up to 6 high (48 bottles) while driving with full bottles

## Recommendations

1. Use forks with a thickness of approximately 4 cm

2. If the OP® crates are only lifted from the front or rear,

forks of 1 metre are optimal

3. Preferably use a forklift with side shift

4. These stacking heights are for internal storage. In case of wind, be careful with stacking empty crates outside your warehouse.

© OP SARL Pau (64 - France) – All rights reserved.

No part of this publication may be duplicated in whole or in part or reproduced

without the express written permission of the publisher.

OP SARL cannot be held responsible on the base of this instruction and no rights can be derived from this instruction.

OP SARL - 48, boulevard Recteur Jean Sarrailh - 64000 PAU - France - www.op-crate.com